




Hardware Connections

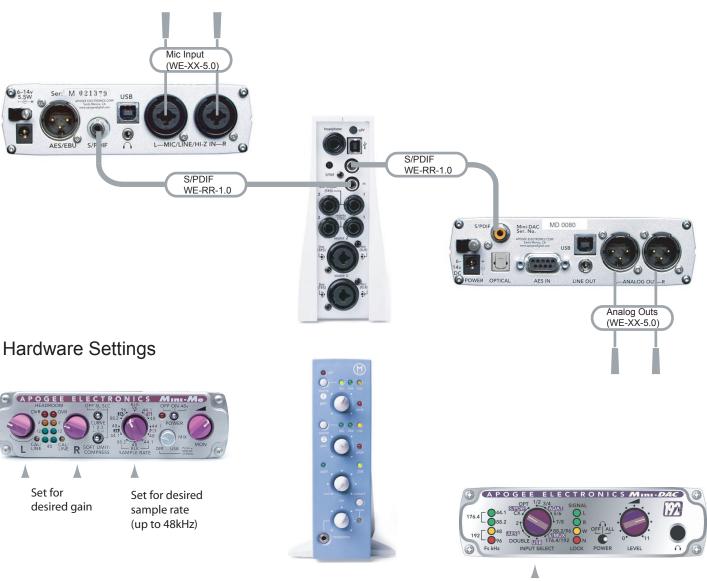

Software Settings

After making all the hardware connections, open Pro Tools software. Under **Setups** select **Hardware Setup**. In the Hardware Setup page, set **Clock Source** to **S/PDIF**, and set **Ch. 1-2 Input Source** to **S/PDIF**.

As configured above, Pro Tools software inputs are routed from the Mini-Me's hardware inputs, and Pro Tools software ouputs are routed to both the MiniDAC's and MBox's hardware outputs. Also, note that the MiniMe's **DIR-USB** and **MON** knobs are not used.

Hardware Setup		
Peripherals	MBox	
Mbox	Ch. 1-2 Input Source	
	Analog	
	S/PDIF	
Mbox #1		
Clock Source		
S/PDIF		
Comple Date		
Sample Rate 44.1 kHz		
44.1 KHZ		
		(OK)

S/PDIF CX